



- 型号：DKZE1708S
- 结构：机械式结构
- 轴：Cherry MX 机械轴
- LED：单色LED灯
- 键帽材质：ABS 或 PBT
- 印字技术：二色成形 或 雷射雕刻 或 热升华
- 尺寸：440 x 140 x 41 mm
- 重量：1.2kg
- 产地：中国

▲ 确切规格每个地区可能会有不同，详情请询问各地代理商。

### 键盘特别功能

- USB输出字元加速功能
- 锁定Windows键状态
- USB N-Key Rollover全键无冲功能

Fn +	Esc	开启/ 关闭Function mode模式	必须压住1秒钟切换
	F1~F4	调整首字延迟时间	
	F5~F8	调整字元重复频率	
	F10	开启/ 关闭锁定Windows键功能	必须压住1秒钟
	F12	开启/ 关闭USB N-key Rollover功能	必须压住1秒钟
	左Ctrl + 右Ctrl	将键盘回复出厂设定	必须压住5秒钟

#### 重点提示：

只有在「Function mode模式」下才能进行切换USB输出字元加速功能，在一般模式下无法立即切换。

### 灯光操作模式

Fn + F9

- 第一次：100%全亮模式
- 第二次：呼吸灯模式
- 第三次：波浪模式(由左而右)
- 第四次：波浪模式(由上而下)
- 第五次：蛇形跑马灯
- 第六次：雨滴模式
- 第七次：单点亮模式
- 第八次：爆炸模式
- 第九次：极光模式
- 第十次：关闭背光

▲ 以上各种模式，皆可以透过下列操作来进行细节调整

- Fn + 1~7：选择1~7阶亮度
- Fn + 0：关闭所有背光
- Fn + ↑：增加LED亮度
- Fn + ↓：降低LED亮度
- Fn + S：储存当前灯光效果

### 记忆区域背光功能

- Fn + F11：开启/关闭CM1
- Fn + PrtSc：开启/关闭 CM2
- Fn + Scroll Lock：REC1，录制CM1设定
- Fn + Pause：REC2，录制CM2设定

操作过程：

- 1.按下Fn + Scroll Lock为设定CM1的设定，若按下Fn + Pause则是设定CM2的设定。
- 2.当进入录制模式后，按下按键即可点亮按键，反之则取消该按键背光。
- 3.当完成录制后，按下Scroll Lock结束CM1录制，按下Pause结束CM2录制。



- Model Name: DKZE1708S
- Type: Mechanical Keyboard
- Switch: Cherry MX
- LED: Single color LED
- Keycap Material: ABS or PBT
- Legend printing: Double-Shot or Laser Engraved or Dye-Sub
- Dimensions: 440 x 140 x 41 mm
- Weight: 1.2kg
- Production: China

▲ For keyboard's specs and details, please contact our local distributors.

### KEYBOARD SPECIAL FUNCTIONS

- USB Repeat Acceleration
- Windows lock feature
- USB N-Key Rollover functions

Fn +	Esc	Function mode On/Off	Must Hold for 1 sec
	F1~F4	Adjust USB Delay Time	
	F5~F8	Adjust USB Repeat Rate	
	F10	Windows Lock On/Off	Must Hold for 1 sec
	F12	USB N-Key Rollover On/Off	Must Hold for 1 sec
	Left Ctrl+ Right Ctrl	Reset to Factory Defaults	Must Hold for 5 sec

Note:

USB Repeat Acceleration can only be adjusted under "Function Mode".

### LED LIGHTING MODES

Fn + F9

First Mode: 100% Full Backlight mode

Second Mode: Breathing Mode

Third Mode: Wave Mode (left to right)

Fourth Mode: Wave Mode (up to down)

Fifth Mode: Snake Marquee Mode

Sixth Mode: Raindrop Mode

Seventh Mode: Reactive Mode

Eighth Mode: Explosion Mode

Ninth Mode: Aurora Mode

Tenth Mode: Backlighting Off

▲ Users can adjust some modes with the following the key sequence.

- Fn + 1~7: Setting backlighting brightness (Level1~7)
- Fn + 0: Turn off all backlighting
- Fn + ↑: Increase brightness
- Fn + ↓: Decrease brightness
- Fn + S: Save backlight Mode

### LED ZONE CUSTOMIZATION MODE

- Fn + F11: CM1 On/ Off
- Fn + PrtSc: CM2 On/ Off
- Fn + Scroll Lock: REC1
- Fn + Pause: REC2

Recording Steps:

1. Press Fn + Scroll Lock to record CM1, and Press Fn + Pause to record CM2.
2. When start recording mode, hit any keys on the keyboard, then will set thekey's light up.
3. To finish recording, press Scroll Lock to finish CM1 recording; press Pause to finish CM2 recording.